


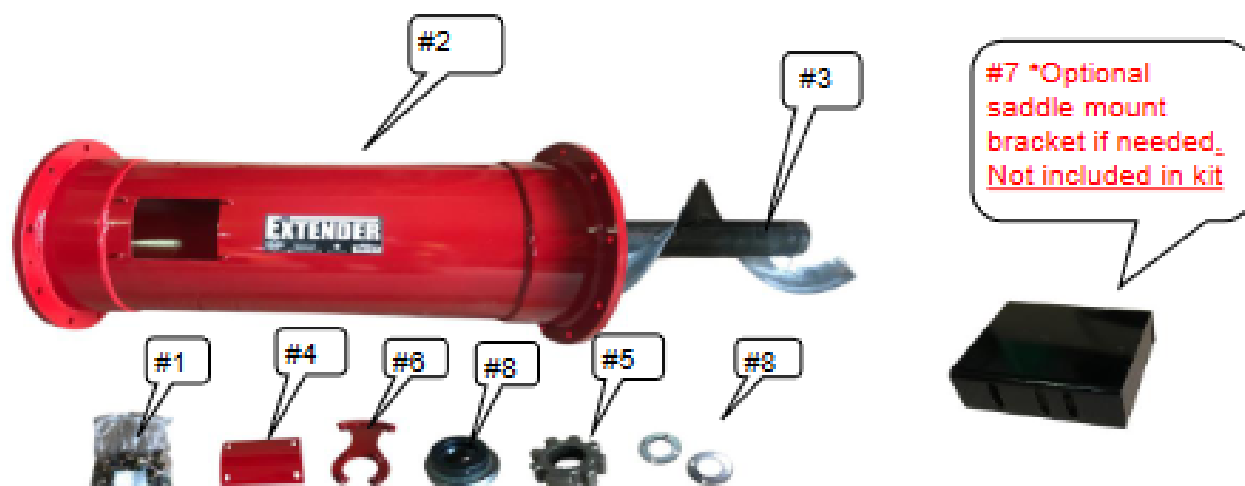

EXT-CNHI-NLINE-316

Extender

EXT-CNHI-INLINE-316**Parts list for CNH INLINE Extender**

Description Part Number

1. Bolt Package EBK-CNHI-Inline-H (1)
2. Tube EXT-CNHI-INLINE-OT (1)
3. Auger Unit EXT-CNHI-INLINE-A (1)
4. Inspection Door EXT-CNHI-INLINE-DR (1)
5. Coupling EXT-CNHI-DRIVE-CS (1)
6. Hanger Bracket EXT-CNHI-INLINE-HB (1)
7. Bearing & Locking Collar AEL208D1 (1)
8. Flangettes 80MM4 (2)
9. **Saddle Mount Bracket EXT-CNHI-INLINE-SADDLE* (1)

*** NEVER LEAVE UNLOADING AUGER FULL UNLESS ABSOLUTELY NECESSARY!**

EXT-CNHI-INLINE-316

**COMBINE UNLOADING AUGER EXTENSION FOR:**
*High Capacity Case Combine with an Actuator Spout***Installation Instructions:**

1. Remove auger from combine
2. Take out bolts in middle flange and split auger into two halves and remove the flighting out of shorter section.
3. Install the bearing into the hanger bracket and the hanger bracket into the 3' extension tube. Install the extension tube onto the outer tube. Then install 3' auger.
4. Install the inner tube onto the 3' auger tube.
5. Install auger piece into 3' auger extension.
6. Install auger back onto combine.



*** NEVER LEAVE UNLOADING AUGER FULL UNLESS ABSOLUTELY NECESSARY!**